

PREMIUM

B/R/K

INSTRUCTION MANUAL PREMIUM Pressure Cooker



Before first use, read these instructions including their notes with care and keep them stored for future reference!

We are delighted that you have selected our quality product.

Before using your new pressure cooker, please read these instructions for use carefully and completely.

Please note that improper use may possibly lead to damages.

1. People not familiar with the use of this pressure cooker should not be allowed to use it.
2. Never leave the pressure cooker unattended while under pressure.
3. If you use this pressure cooker when children are in the vicinity, please be particularly careful.
4. Use this pressure cooker only for the purpose of fast cooking, for which it was designed.
5. On each occasion before use, check the cleanliness and function of the safety valve, pressure-regulation valve as well as sealing ring.
6. Pressure will build up during the cooking process. It is, therefore, important to close the lid tight before using the cooker and to carefully read the notes on use and safety in the Instructions for Use because wrong use may lead to personal injuries or damages to the cooker.
7. This pressure cooker is not provided with a pressure indicator. Please observe the steam emission from the pressure-regulation valve – this is the indicator of successful pressure build-up in the cooker.
8. Never exceed the specified minimum fill capacity (= liquid + cooked food)
9. Never exceed the specified maximum fill capacity. (= liquid + cooked food)
10. Only use the pressure cooker on heat sources that are specified in the Instructions for Use.
11. Under pressure, the pressure cooker must never be used for roasting or frying using oil.

12. Never use the pressure cooker in a baking oven as it may become damaged.

13. Heed the extra notes on preparing special foodstuffs in the Instructions for Use described in the «Safety Notes» section».

14. Always touch the hot pressure cooker by its handles.

15. Never force open the pressure cooker. Before opening the pressure cooker, make sure that the pressure has been completely relieved. (See further formation in the Instructions for use).

16. When releasing the steam, keep hands, head, and body out of the way of the steam.

17. The pressure cooker's lid and other parts are not dishwasher safe.

18. Exclusively use original spare parts.

19. If repairs are necessary, please contact our customer service department. (s. overleaf)

20. Spots on the bottom of the pressure cooker can be easily removed using lemon or vinegar. In case of lime stains proceed acc. to page 11, please.

21. On no account should you use scouring agents or wire wool for cleaning.

22. Carefully keep these Instructions for use.

23. Pot must not be used for deep-frying in oil, fat, or grease.




24. Do not leave oil or grease unattended. Please be aware that hot oil or grease can catch fire. Never use water to extinguish a grease fire. Cover with a lid or other appropriate cover or use an appropriate fire extinguisher.

So enjoy your pressure cooker and its savoury results.



1.) Open

Release the lid-lock. Draw the lid and cooker handles apart.
- Remove the lid

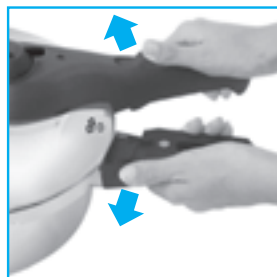

2.) Closing


The circle symbols on the lid and the cooker handle should be opposite one another. Push the lid and cooker handles together – the cooker lid is locked

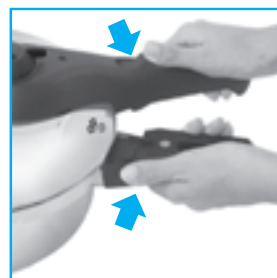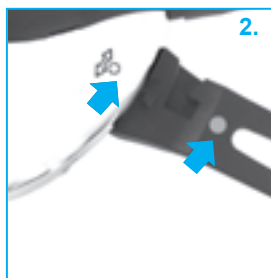

3.) Fill with the food to be cooked

Take care to observe the minimum liquid level of approx. 3/8 litre! (see page 12+14)

Now add the food to be cooked. Maximum 1/2-full for foods which swell up or foam. Maximum 2/3-full for all other foods,

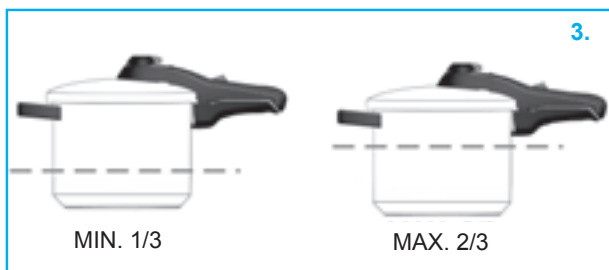

4.) Set pressure level



5.) Turn the heating element up to full



6.) Pressure cooking starts

When steam escapes, turn the heating element down to the lowest setting.



7.) Cooking time finished

Switch off the stove!



8.) Release the pressure slowly in stages...

or, depending on the recipe, wait until the pressure has subsided. Caution - the steam is extremely hot! (see page 16)



9.) Open the pressure cooker

(see page 16)



Important Safeguards / Quick info	Page 2 - 5
Contents	Page 6
Cooking with the pressure cooker	Page 7 -10
Notes on safety	Page 11 - 13
Operating instructions	Page 14 - 16
At the end of the cooking time	Page 17
Cleaning and maintenance	Page 18
Questions and answers	Page 19
Food preparation Instructions	Page 20
Cooking times / tips	Page 21 - 22
EC Declaration of Conformity	Page 23
Spare parts	Page 24





nominal fill	capacity max. 2/3	pot dia.
6,0 L	4,0 L	24 cm

To guarantee both its safety and long service, this pressure cooker is manufactured to extremely high standards, and only the best materials are used. We hope you will obtain plenty of enjoyment from its use.

This pressure cooker offers you many advantages:

The adjustable pressure-regulation valve.

Instructions in recipes and cooking time tables can only ever be guidelines. This is why we have developed a adjustable pressure-regulation valve which you can set in two positions between **1** and **2**. This has the advantage that, according to size or amount of the food to be cooked, you can set the pressure individually in the cooker using the valve. Please consult the cooking times table at the end of this instruction booklet for basic settings.

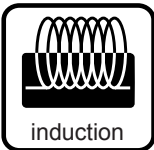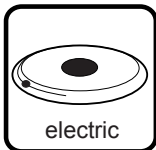

You will cook more healthily.

Your food will be prepared especially gently by cooking it for a shorter time and in the oxygen-free steam. Every minute you save means a saving of important vitamins, nutrients and minerals.

Your cooking will taste better. By cooking without oxygen, the flavour and natural colouring of your vegetables will to a very large extent be preserved.

You will cook more quickly, and save time and energy

Using this pressure cooker you will save up to 70% of the time you have previously spent on cooking. In addition, you will save energy, up to 60 % on dishes with a longer cooking time and between 30 % and 40 % on dishes with shorter cooking times.

To a large extent, cooking smells and cooking vapours will now disappear. Look after your pressure cooker well, and you will enjoy your pressure cooker for a long, long time.

So please read these Instructions for Use carefully and completely.

Cooking with the pressure cooker



- 1 Pressure regulator valve
- 2 Safety valve / pressure indicator
- 3 Sliding locking-catch
- 4 Safety window
- 5 Locking markings

- 6 Lid with sealing ring
- 7 Handle with flame protection
- 8 Cooker pot
- 9 Thermo sandwich bottom



The pressure regulator valve for continuously-variable cooking settings. The valve keeps the pressure and temperature at the desired setting automatically.

Position **1** for gradual cooking (60 kPa) ca.113°C

Position **2** for quick cooking (100 kPa) ca.120°C

Position  for gradual release of pressure

Position  for cleaning the valve

Maximum permitted pressure for this pressure cooker: 3.0 bar / 300 kPa



The safety vale, which also acts as pressure indicator:
While pressure in the cooker is building up, the **RED pressure indicator** is visible and the cooker is locked (never attempt to open it using force).



If the pressure indicator is not visible, the cooker is no longer under pressure. It can then be opened.

If for any unexpected reason the pressure regulator valve does not release steam as it should, this valve will open in accordance with the prescribed values.



The locking system:

Place the lid on the cooker so that the locking markings are opposite each other and slide lid and cooker handles one above the other. The sliding locking-catch clicks audibly into place. As a pressure cooker generates very high pressure and steam temperature, under the subject **OPENING** please be certain to observe the instructions on pages 8 and 10 of these instructions for use.



The safety window:

An additional safety element is the safety window let into the top of the lid. If there is excessive pressure in the cooker, the sealing ring forces its way out through this window, and the steam can escape.



5

The lid and sealing ring:

Sealing rings are subject to wear-and-tear, and must be replaced when necessary.

Important: you should only use our own original sealing rings.



6

The sliding locking-catch:


When the lid is closed, the sliding locking-catch clicks audibly into place. The lid can then only be unlocked by pressing the locking-catch in the direction of the cooker body.



8

The pressure cooker:


This pressure cooker – with its attractive, timeless design – is made of high-quality, rustless 18/10 stainless steel, is easily cared for and – WITHOUT ITS LID – may also be cleaned in the dishwasher. Without its lid, it may also be used as a normal saucepan.

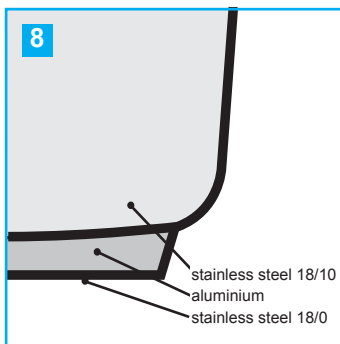

8

The thermal sandwich capsule base:

A super-strong base for all hob types. It is absolutely stable, guarantees best heating characteristics and saves energy.




electric



gas



ceramic



induction

Fits all oven types.

Before first using the pressure cooker, please read these instructions.

The pressure cooker and pressure cooker lid should be cleaned thoroughly using hot water on each occasion before use.

If after the first boiling, white spots should form on the bottom of the pot, these are caused by extreme hardness of the water.

These spots can easily be removed either using vinegar or descaler. On no account should you use abrasive cleaners or wire wool for cleaning. This also applies for cleaning the stainless steel exterior.

Please check that the pressure-regulation valve and the safety pin are freely moveable.

People not familiar with the use of this pressure cooker should not be allowed to use it.

If you use this pressure cooker when children are in the vicinity, please be particularly careful.

This pressure cooker may only be used for the purpose of fast cooking, for which it was designed. It may only be used as a «normal» saucepan without a lid. Please never use it in a baking oven or in a microwave.



The pressure cooker may only be placed on the appropriate hob for its size. When using full power to heat it, always keep it under observation.

When using it on the an electric hob, the hotplate must be less than or equal to the diameter of the pot.

When using it on a gas stove, the flame ring must not exceed the base diameter.

A too large gas flame may damage the handles.

When using it on a ceramic hob, make sure the bottom of the pot is clean and dry.

Never touch the outside of the pressure cooker during the cooking procedure, as you may burn yourself.

If the pressure cooker is still hot, it must only be touched or moved with great care, and by using the handles on the pressure cooker itself; not the handle on the lid.

Do not carry the pressure cooker by holding it on the lid's bow. Always use both hands to carry it by holding the side handles.



Check continuously the fastness of the pressure cooker handles. Once you observe handles become loose, use a screwdriver to fasten them properly again.

The pressure cooker must never be used without liquid, otherwise it may be damaged.

The minimum amount of liquid should be approx. 0,4 qt (3/8 L,) irrespective of the amount of the food to be cooked!

The pressure cooker should be filled at least 1/3 incl. the food to be cooked.

The pressure cooker must never be filled more than 2/3-full, or when cooking food which wells up or bubbles strongly (e.g. rice or pulses) not more than half-full. These foods should first be brought to the boil in the uncovered pressure cooker and then skimmed before the lid is closed.

Under pressure, the pressure cooker must never be used for roasting or frying using oil.

When preparing e.g. sausages with an artificial skin, this must first be pierced. If the skin is not pierced, it will expand under pressure and may burst. Any splashes thus occasioned may cause burns.

If you have cooked meat with the skin on which is swollen after cooking, do not pierce it but let it go down. Otherwise you might burn yourself.

You should not pressure-cook foods which tend to cause foaming, such as apple purée, rhubarb, spaghetti, rolled oats or other types of cereals. As these foods can be swirled upwards during cooking, there is a risk of the cooker valve becoming blocked.

If the contents are mushy, the pressure cooker must be agitated gently before opening it.

During cooking, bursts of steam will be given off vertically from the centre of the regulator valve.

Please take care that you do not come into contact with this hot steam.

During the cooking process, the safety devices must not be interfered with.

When the pressure cooker is under pressure, force must never be used in an attempt to open it.

The pressure cooker must be allowed to cool down before it is opened. Steam pressure must be completely released, otherwise it will not be possible to open the cooker. Please read the opening instructions (page 16).

Do not undertake any modifications to the safety devices; otherwise there is risk of scalding. When releasing the steam, keep hands, head and body out of the way of the steam.

You should only use original accessories and spare parts or lids and pots as designed for these pressure cookers.



Pressure cookers or accessories which are deformed or damaged in any way should not be used in any circumstances.

If repairs are necessary, please contact our customer service department.

Before cooking

Before each use, make sure that the safety locking system, the pressure regulator and the sealing ring are all clean and functioning properly.

Particularly ensure that the safety valve on the underside of the lid (A) can be moved («waggles»).

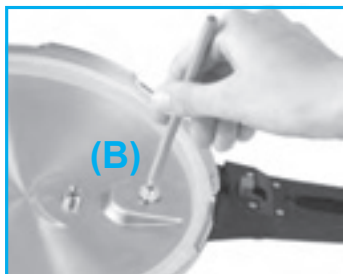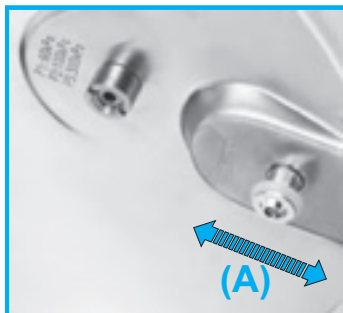

The pin (B) should be checked for free motion (against spring pressure) using a pointed object.

Operating instructions

Fill the pot with sufficient liquid to generate the necessary steam (water, sauce or stock).



WARNING: always add adequate liquid. NEVER let the pressure cooker “cook dry”.


Now add the cooking material.

Liquid and food to be cooked should fill at least 1/3 of the pot's capacity.

Maximum 1/2 full for foods that expand or tend to foam.

Maximum 2/3 full for all other foods.

Please observe the filler scale inside the pot.

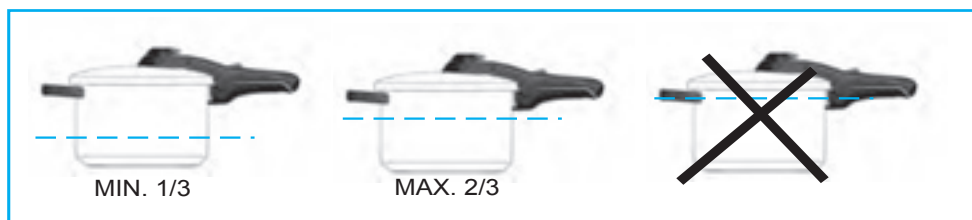

Please check that there is adequate space between the food to be cooked and the lid with safety valves.

Note:

So that the base of the pot is not corroded by salt, you should only add salt to water which is already boiling, and stir it gently.

Now put the lid on the cooker.

One-hand opening-/closing-system with push button



The steam insert:

Put the wire stand onto the bottom of the pot and place the steam insert onto the stand. Pour just enough liquid into the pot so that its level will just be under the insert. Foodstuffs meant for stewing or steaming may now be put into the insert and will cook through the flow of developing vapour. The foodstuffs will remain tender and juicy through this method. Using the steam insert is significantly contributing towards a healthier diet because water-soluble vitamins and nutrients will be preserved and by doing without oils and fats, the stewing/steaming method is recommended within the scope of a calorie-conscious diet.



Setting the desired cooking level:

Position 1 :

Gentle cooking stage for steaming and stewing more delicate foods such as vegetables, fish, fruit, ...



Position 2 :

Fast cooking stage for cooking and braising e.g. meat, soups, stews, ...

Cooking time table Page 21 – 22



Pressure cooking is so easy...

Select the desired cooking level with the help of the pressure-regulation valve:


Set pressure stage

1 = Gentle cooking

2 = Fast cooking

Set oven to top cooking level

Place the pressure cooker with preset cooking setting on the correct source of heat, and turn this up to full power.

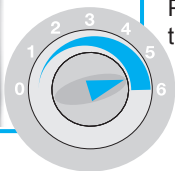

The red pin will become visible with increasing pressure. From this point on, the pot must not be opened



Depending on how full the cooker is, it will take several minutes until the preset cooking stage has been reached. This is the case as soon as steam starts to escape permanently from the pressure-regulation valve.

The actual cooking time only starts from this moment.

Only at this point should the source of heat be turned down to a lower stage.

In this way, you avoid unnecessary consumption of energy and the risk of the cooker boiling dry.



At the end of the cooking time ...

Switch off oven!



Gradually steam off...

or wait as per recipe until the pressure is relieved.

Do not turn from pos. 1 or 2 to 0, but gradually set valve to pos. 0 .

Warning: The escaping steam is extremely hot (see pages 12/13).

Opening the pot

Wait until all steam has escaped, at which point you can switch off the pressure cooker. The lid may be removed.

WARNING: Never use force to open the lid.



The heating source is turned off when cooking time is finished, and the pressure in the cooker must be released. Take the cooker away from the hob, and place it on a suitable surface. There are the following 3 options for releasing the pressure:



Gradually and slowly turn to position “0”!



1.) Let it cool down:

Wait until the red pin on the safety valve has completely disappeared. ***This is the recommended method for foods which are mushy or tend to foam.***



2.) Gradual release of pressure:

Slowly turn the pressure regulator valve from position 2 to position 1 and wait for a few seconds. Then gently turn the valve further to steam release position 0. From position you can turn directly to pressure release position 0.

WARNING: The escaping steam is extremely hot. The steam escapes vertically, so please do not hold your hands above the valve. Wait until all the steam has escaped, and the pressure indicator is no longer visible. This method is not suitable for foods which are mushy or tend to foam.

3.) Quick release of pressure:

Hold the cooker under cold running water and let cold water slowly run over the lid – not over the plastic parts – until the red pin on the safety valve has dropped completely out of sight. Please do not place the pot into water. The pot is depressurised when the red pin has dropped completely out of sight. Now set the pressure-regulation valve to position “0”. Once all steam has escaped, you can then switch off the pressure cooker. The lid may be removed.

WARNING: Never use force to open the lid, and never interfere with the safety systems. The cooker can only be opened when it is no longer under pressure.

Cleaning and maintenance

Clean your pressure cooker after every use with hot water and washing-up liquid. Please do not use any scratching, abrasive or caustic cleaners, or any that contain chlorine. The pot can also be cleaned in the dishwasher without its lid. The lid should always be cleaned by hand.



Cleaning and replacing the sealing ring:

To clean the sealing ring, rinse it under hot running water and dry it. As soon as the sealing ring becomes hard (when it begins to turn a brown colour), it should be replaced.



The safety lock pin

Only needs – along with cleaning the lid – to be run through and rinsed with running water. It can also be tested clear by using a pointed object.



Cleaning the pressure regulator valve:

Remove the plastic top. To do this, press the valve down and turn it completely to the left position:



The valve can now be lifted off and removed upward from its catch. Clean by running under water and reinsert into catch.

Please ensure that the grooves on the valve are put into the appropriate holders.



You should store the pressure cooker after cleaning and drying it in a clean, dry and protected environment. Do not put the lid on and do not lock it, but store it with the lid upside down on the top of the pot, for example.

**Please note:
the pressure cooker's lid is not
dishwasher safe.**

When it takes a long time to come to the boil:

- The source of heat is not hot enough
- Turn up the source of heat to maximum

If the red pin does not rise, and steam does not escape from the valve during cooking:

- This is perfectly normal in the first few minutes (pressure build-up)
- If this persists, check whether:
 - The source of heat is hot enough; if not, turn it up
 - There is sufficient liquid in the cooker
 - The pressure regulator valve is not set at „ 0 “
 - The pressure cooker is properly shut
 - The sealing ring or the rim of the cooker is damaged

When the red pin has risen during cooking and steam is not escaping from the pressure regulator valve:

- Hold the pressure cooker under cold running water to release the pressure
- Open the pressure cooker
- Clean the pressure regulator valve and the safety valve

When the steam escapes from all around the lid, check:

- Whether the lid is properly closed
- Whether the sealing ring is properly fitted
- The condition of the sealing ring (if necessary, change it)
- Cleanliness of the lid, the safety valve, and the pressure-regulation valve
- That the rim of the cooker is in good order

When the lid cannot be opened:

- Check whether the safety pin has dropped completely; if not, release the pressure.
- If necessary, cool the pressure cooker off under cold running water

When the food being cooked is either not fully cooked or overcooked, check:

- The cooking time (too short or too long)
- The hotplate output
- That the pressure-regulation valve is correctly set
- The amount of liquid

When the food being cooked is burned on in the pot:

- Leave your pressure cooker to soak for a good time before cleaning it
- Do not use any caustic cleaners, or cleaners containing chlorine

When one of the safety devices is triggered:

- Turn off the source of heat
- Allow the cooker to cool down
- Open it
- Check the pressure regulator valve, the safety valve, and the sealing ring and clean them




Every time you cook, always make sure that the correct amount of liquid is added – you must never “cook dry”. Please ensure that the cooker is never filled more than 2/3 full.

Please read the corresponding instructions in these Instructions for Use.

Different cooking times will also depend on the quality and size of the food to be cooked. For this reason, the times given below are only approximate.

After a time, you will accumulate enough experience yourself to know exactly how long you must cook your food.

It is not necessary to defrost deep-frozen foods in advance. It is sufficient to lengthen the cooking times slightly.

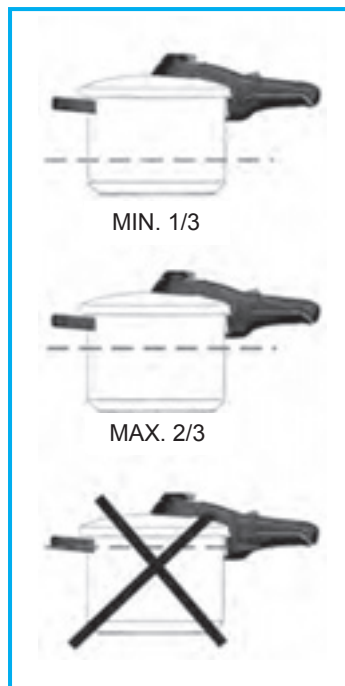

Soups and stews with braised meat:

Where cooking times of the different ingredients do not vary too much (e.g. for meat and vegetables), the meat is browned and then the vegetables are added with the water. When cooking times vary widely, interrupt the meat cooking and add the vegetables and water for the last few minutes. In this way, the meat and the vegetables will finish cooking at about the same time.

For soups and stews you should note: that foods which tend to foam up must be brought to the boil in an uncovered pressure cooker, and should be skimmed off before you close the cooker. When cooking is finished, please let the steam escape slowly, or leave the pressure cooker to cool down.

SOUPS

	COOKING TIME	RAPID COOK
Bean soup	20 min	2
Pea soup (not soaked)	20–25 min	2
Vegetable soup	4–8 min	2
Semolina soup	3–5 min	2
Goulash soup	10–15 min	2
Potato soup	5–6 min	2
Bone marrow soup	20–25 min	2
Minestrone	8–10 min	2
Rice soup	6–8 min	2
Beef tea	35–40 min	2
Boiling chicken	25–35 min	2
Tomato soup with rice	6–8 min	2

STEWES

	COOKING TIME	RAPID COOK
Cabbage stews	15 min	2
Lentil (soaked)	13–15 min	2
Bavarian Pichelsteiner	20 min	2
Serbian beef stew	8–10 min	2

VEGETABLES

	COOKING TIME	GRADUAL COOK
Cauliflower	3–7 min	1
Peas, green	3–5 min	1
Carrots	3–7 min	1
Stuffed capsicum	6–8 min	1
Mushrooms	6–8 min	1
Beetroot	15–25 min	1
Cabbage types	5–15 min	1
Spinach	3–4 min	1

RAPID COOK

Beans	6–10 min	2
Potatoes	6–8 min	2
Potatoes (unpeeled)	6–12 min	2
Celeriac	12–15 min	2

Vegetables:

The finer the vegetables are cut up, the shorter their cooking time will be. On the other hand, if you prefer them “crunchy”, their cooking time is shorter. The more vegetables you cook, the longer the cooking time will be.

Suggestion: it is better to undercook – extra cooking is always possible.

MEAT	COOKING TIME	RAPID COOK
Knuckle of pork	30-40 min	2
Goulash	15-20 min	2
Minced meat	5-10 min	2
Chicken	20-25 min	2
Veal, sliced	6 min	2
Veal, roast	15-20 min	2
Veal fricassee	5 min	2
Turkey leg	25-35 min	2
Beef roast	40-50 min	2
Rib of pork	10-12 min	2
Meat roulade	15-20 min	2
Braised marinated beef	30-35 min	2
Roast pork	25-30 min	2
Knuckle of pork (Bavarian style)	25-35 min	2
Braised venison	25-30 min	2

Meat:

Meat is brought to the boil in the uncovered pressure cooker. The necessary liquid is then topped up on deglazing. Pieces which are too large should be cut up and browned individually, then laid over one another to complete cooking.

FISH	COOKING TIME	GRADUAL COOK
Steamed fish with potatoes	6-8 min	1
Fish in white wine sauce with potatoes	6-8 min	1
Cod	4-6 min	1

Fish (fresh):

Cook with adequate liquid, according to amount. Since fish stock is extremely sticky, the lid should be removed as soon as the pressure indicator has completely disappeared.

Frozen food:

The otherwise long times needed for defrosting shrink to minutes, but still depend on type and amount of the food to be defrosted. Defrosting in the pressure cooker preserves the vitamins, minerals and flavours of your food.

B/R/K

Wuppertal, 24.02.2011

EC Declaration of Conformity For Pressure Cookers

EC type examination, module B
(conformity assessment)

We hereby declare that the pressure cookers stated below correspond with the relevant health and safety requirements of the EC directives, due to their design and construction as well as in the versions we introduce to the market.

This declaration becomes invalid if unauthorised changes are made to the appliances.

Appliance type: „PREMIUM“ pressure cooker

Relevant EC directives: RL 97/23/EC

Applied norm: DIN EN 12778 / 09.05
ZEK 01.1-08 / 06.08

B/R/K cookvision GmbH & Co. KG



Peter Rommerskirchen, General Manager

www.schnellkochtopf24.de

You find the suitable spare parts for your product on our web page. You can easily order the products online whenever required.

Seal ring	Art. no.: 507048000
Steam insert	Art. no.: 507010000
Pressure regulator valve	Art.-Nr.: 507026000

IMPORTANT!

When any parts are replaced, only our own ORIGINAL spare parts designed for this pressure cooker may be used.

If repairs are necessary, please contact our customer service department. Repairs may only be undertaken by authorised repairers.



If you order spare parts, please state:

MODEL: pressure cooker PREMIUM



Customer service

B / R / K Vertriebs-GmbH
Westring 340
42329 Wuppertal / Germany
Tel.: +49 (0)202 283 77-0
Fax: +49 (0)202 283 77-91

E-Mail: info@brk-germany.com
www.schnellkochtopf24.de